




ÖZCİHAN MAKİNA
Özcihan Makina San. ve Tic. Ltd. Şti
www.ozcihan.com.tr




ARA ŞANZİMAN / SPLIT SHAFT (PTO)

PTO KODU / PTO CODE

CTM 336 2000

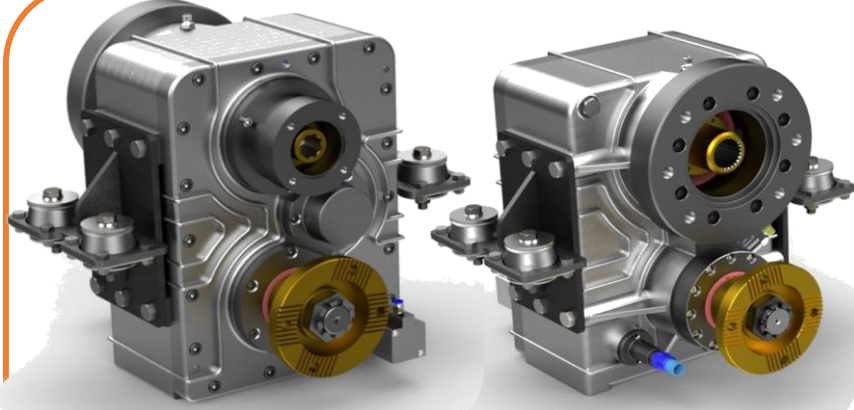

GENEL BİLGİLER / GENERAL INFORMATION

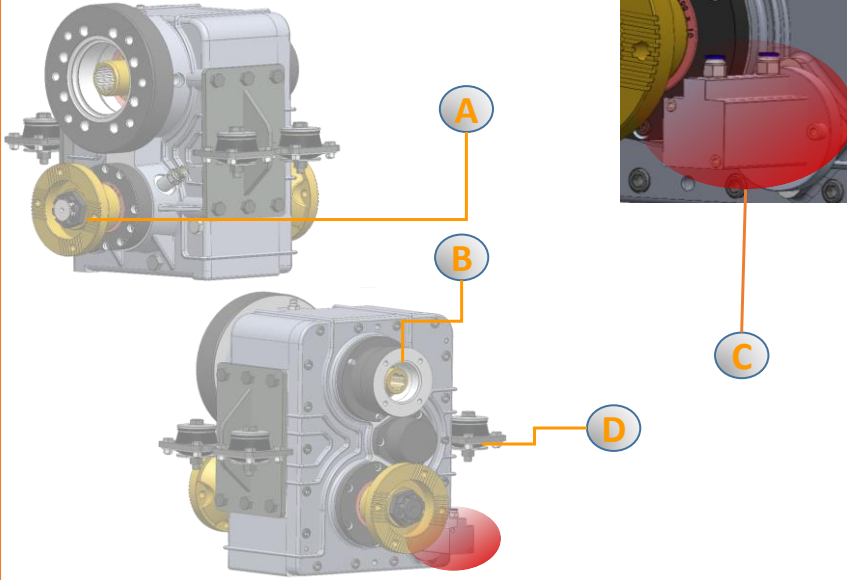

OPSİYONLAR / OPTIONS

- A** GİRİŞ / INPUT
- B** ÇIKIŞ / OUTPUT
- C** HAVALI KONTROL / AIR CONTROL
- D** YAN BAĞLANTI KİTİ / SIDE CONNECTION

TEKNİK BİLGİLENDİRME / TECHNICAL INFORMATION

A ANA SHAFT / MAIN SHAFT

TORK / TORQUE: 12.000 Nm

B ÇIKIŞ GÜCÜ / OUTPUT FORCE (1000 dev/dk) ORAN/RATIO : 1,12

TORK / TORQUE: 75 Kgm (735Nm) - GÜÇ / POWER : 78 KW

AZAMİ HIZ/ MAX. SPEED


2800 - 3300 RPM

AĞIRLIK / WEIGHT


170 Kg



TEKNİK ÇİZİM / TECHNICAL DRAWING

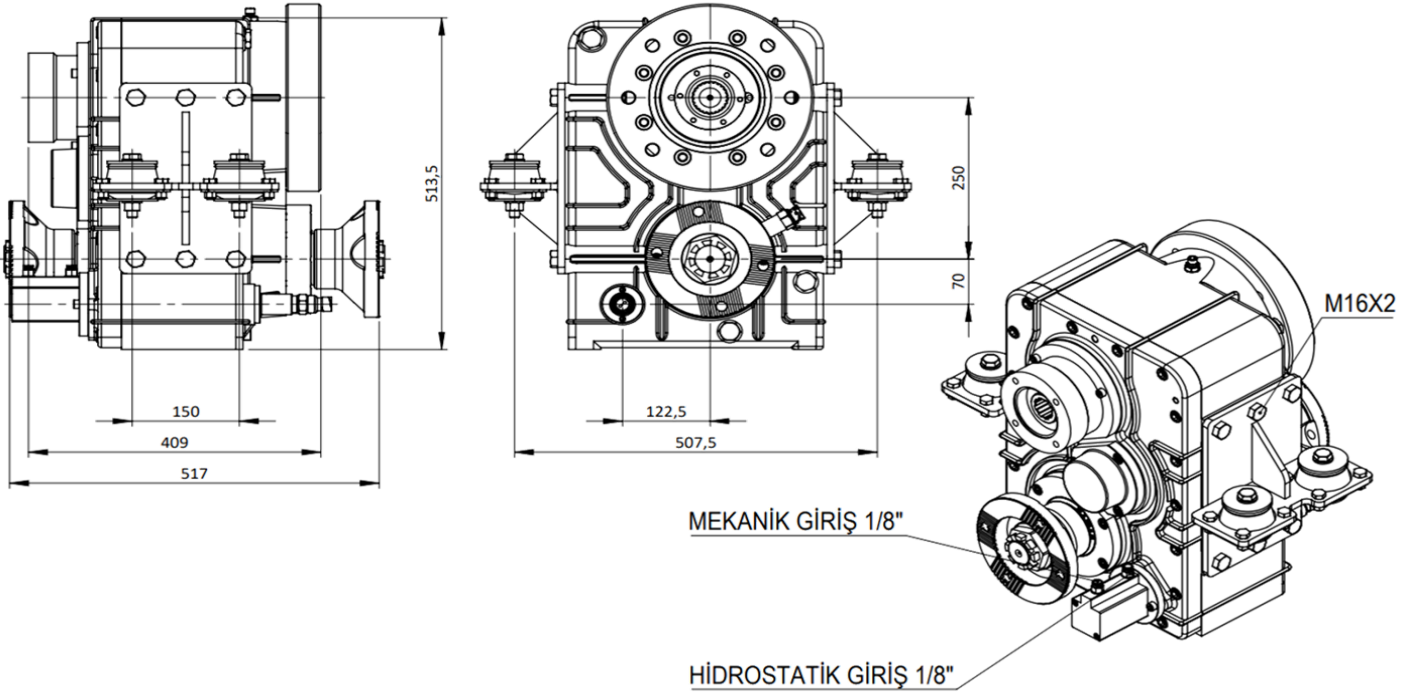

BAĞLANTI / MOUNTING SIDE

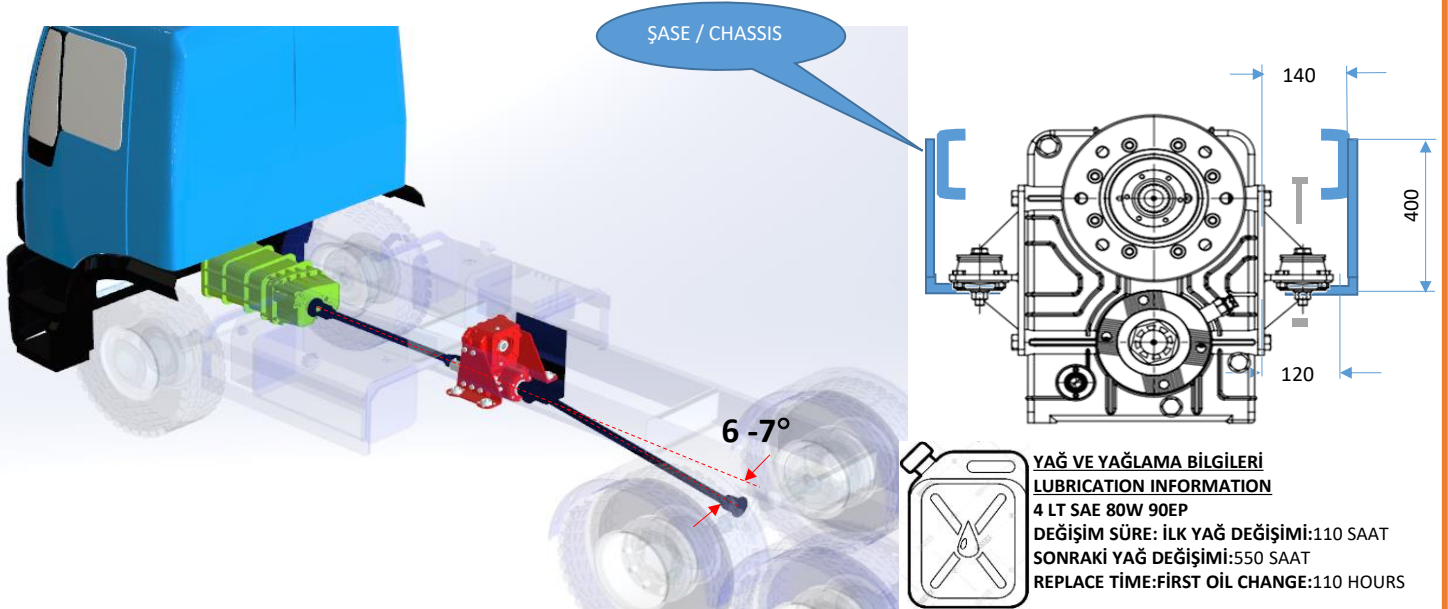

Önemli: 1- Hava bağlantı hattında, şartlandırıcı kullanalım. Kullanılmadığı takdirde; * Yüksek hava basıncı piston kafasının kırılmasına neden olur.

Ara şanzıman devreye girmez. * Yüksek hava çatalın üstündeki civatayı kırar ve şanzımana büyük hasar verir.

2- Ara şanzıman yağının azalmamasına dikkat ediniz. Azaldığı takdirde; * Ara şanzıman dişlileri ve rulmanları yanar.

3- Ara şanzıman yağı temiz olmalı. Olmadığı takdirde; * Ara şanzıman senkromeç yerlerinden sarar ve kitlenir. * Rulmanlar bozulu r...

Important: 1- We strongly recommend you to use air pressure stabilizer on air connection hoses. If air pressure increases more than our maximum limits;

* High air pressure may break piston head which cause PTO to not engage when it is needed.

* High air pressure may break the screw on the fork which may cause high damage on the PTO unit.

2- Transmission oil should be checked periodically. If needed, additional oil should be added to transmission. Lack of oil may cause;

* Damage or total lose PTO gears and lining.

3- Transmission oil should be clean all the time. Dirty oil may cause; * PTO to lock itself. * May break bearings in the PTO.



E

ANA FLANŞLAR / MAIN TRANSMISSIONS

1

Ø180 **1.12.336** Z:28 (ISO 8667)

